



---

---

## Iwatsu ADIX Telephone System

Changing the time on an Iwatsu ADIX system can be done from the operator DSS console or from the attendant console.

From the Operator DSS when idle:

1. Press "ICM" + "FEAT" + "6" + "4"
2. Enter the time "HH MM" using the 24 hour military clock
3. Press "SPKR"

From the Attendant Console when idle:

1. Press "ETC" + "ETC" + "ETC" + "F1"
2. Enter the time "HH MM" using the 24 hour military clock
3. Press "RLS"

## Iwatsu ZT-D Telephone System

From the operator only when idle:

1. Go off-hook and press [FEAT] + [SPKR] + [3]
2. Enter the time [HH MM] using the 24 hour military clock
3. Go on-hook

## Iwatsu ZT-S Telephone System

From the Master KT only, when idle.

1. Go off-hook and press [FEAT] + [#] + [2]
2. Enter the time [HH MM] using the 24 hour military clock
3. Go on-hook

## Omega-Voice VMI Voicemail System (IX-4EVMC, IX-4VML, VS-VML)

The system time is entered in the 24-hour clock format. Therefore 6:00 in the morning is entered as **0600** and 6:00 in the evening is entered as **1800**.

1. Access the designated system management mailbox.
2. Enter your pass code when prompted.
3. Press 4, 5, 2.
4. Follow directions to enter the current time of day using the 24-hour (military time) format.