



## Samsung -- DCS, DCS Compact, DCS 50si, DCS 400si, iDCS 500, iDCS 100, DS 616 and voicemail systems (including SVMi-4, SVMi-8, and Cadence)

This is a multi-step process which involves entering administrator level programming and then setting the date and time. Programming can only be done from a 12 or 24 button display telephone.

1. With your handset on-hook, press **TRSF** and then dial **200**. Your display then shows **ENABLE CUS. PROG. PASSCODE:**
2. Dial your 4-digit pass code **1234** (which is the default pass code). The display then shows **ENABLE CUS. PROG. DISABLE**. If the pass code 1234 does not work as stated, please see [Samsung DCS Notes below](#).
3. Dial **1** to enable. The display now shows **ENABLE CUS. PROG. ENABLE**.
4. Press **TRSF** and the display will return to its idle condition. Now that you have entered administrative level programming, you must begin programming within 30 seconds. Any delay of more than 30 seconds between keystrokes will cause the system to automatically exit the programming mode.
5. Next enter the new date and time as follows:  
Press **TRSF** and then dial **505**. The display then shows the current date and time setting on your system. The example below shows Monday, April 7, 2003, 9:30 AM.
6. **OLD: 0 04 07 03 : 09 30**  
**NEW:WMMDDYY:HHMM.**
7. Enter the correct date using the dial pad as follows:  
**W**= Day of the week (0-6; Week begins on Monday and ends on Sunday)  
**MM**= Month (01-12)  
**DD**= Day of the month (01-31)  
**YY**= Last two digits of the year (01)  
**HH**= Hour (Use 24 hour clock and enter the range of 00-23)  
**MM**= Minutes (00-59)  
Press **TRSF** to store and exit programming. If you have entered invalid data, you will receive an **INVALID ENTRY** message for three seconds. Reenter the date and time.

The new date and time will now be updated for all LCD phones on the system. Some internal voice mail systems use this time and date setting. These include SVMi-4, SVMi-8, and Cadence voice mail systems. Other voice mail systems must be set independently from the telephone system. We have listed instructions for several popular [voice mail systems](#) above.

**Samsung DCS Notes:** 1234 is the default pass code for entering customer programming. The system administrator can change this code if desired. If the code has been changed, please input the new code instead of 1234.